

Instruction Manual

ThinkTop® D30



Patented Sensor System Registered Design Registered Trademark

ESE02248-EN6 2022-10

Original manual

Table of contents

The information herein is correct at the time of issue but may be subject to change without prior notice

1.	Declarations of Conformity	2
2.	Safety 2.1. Important information 2.2. Warning signs 2.3. Safety precautions	6
3.	General information 3.1. Concept 3.2. Working principle 3.3. Recycling information	7 7 7
4.	Installation 4.1. Product dimensions 4.2. Compatible actuators 4.3. Installation instructions 4.4. Operating LED feedback	8 8 9 11
5.	Troubleshooting	12
6.	Technical data	13
7.	Parts list 7.1. Parts list	1 4

1 Declarations of Conformity

EU Declaration of Conformity		
The Designated Company		
Alfa Laval Kolding A/S, Albuen 31, DK-6000 company name, address and phone number	Kolding, Denmark, +45 79 32 22 00	
Hereby declare that		
op Unit for Valve Control and Indication esignation		
ThinkTop® D30 ype		
s in conformity with the following directives of EMC Directive 2014/30/EU RoHS Directive 2011/65/EU and amendment		
he person authorised to compile the techni	cal file is the signer of this document.	
Global Product Quali	ity Manager	Lars Kruse Andersen Name
Title		Name
Kolding, Denmark Place		Signature
his Declaration of Conformity replaces Decl	aration of Conformity dated 2017-03-0	1



1 Declarations of Conformity

UK Declaration of Conformity		
The Designated Company		
Alfa Laval Kolding A/S, Albuen 31, DK-6000 Kolding, Company name, address and phone number	, Denmark, +45 79 32 22 (00
Hereby declare that		
Top Unit for Valve Control and Indication Designation		
ThinkTop® D30		
is in conformity with the following directives with ame - The Electromagnetic Compatibility Regulations 201 - The Restriction of the Use of Certain Hazardous Sul	6	Electronic Equipment Regulations 2012
Signed on behalf of: Alfa Laval Kolding A/S		
Global Product Quality Mana	ager	Lars Kruse Andersen
Title Kolding, Denmark Place	2022–10–01 Date (YYYY-MM-DD)	Name Signature
DoC Revison_01_102022		



2 Safety

Unsafe practices and other important information are emphasised in this manual.

Warnings are emphasised by means of special signs. All warnings in the manual are summarised on this page. Pay special attention to the instructions below so that serious personal injury or damage to the top unit are avoided.

2.1 Important information

Always read the manual before using the ThinkTop!

WARNING

Indicates that special procedures must be followed to avoid serious personal injury.

CALITION

Indicates that special procedures must be followed to avoid damage to the ThinkTop D30.

NOTE

Indicates important information to simplify or clarify procedures.

2.2 Warning signs

General warning:



Dangerous electrical voltage:



Caustic agents:



2.3 Safety precautions

Installation:



Always read the technical data thoroughly **Never** install the ThinkTop D30 before the valve or relay is in a safe position If welding close to the ThinkTop D30: **Always** earth close to the welding area Disconnect the ThinkTop D30

Always have the ThinkTop D30 electrically connected by authorised personnel



Maintenance:



Always read the technical data thoroughly

Always fit the seals between the valve and ThinkTop D30 correctly Never install the ThinkTop D30 before valve or relay is in a safe position Never service the ThinkTop D30 with the valve/actuator under pressure Never clean the ThinkTop D30 with high pressure cleaning equipment

Never touch the moving parts if the actuator is supplied with compressed air

Never use cleaning agents that will attack the exterior of the ThinkTop D30. Check with your cleaning agent supplier



Never clean using Alcohol, Acetone, Chloroform, Methanol, Ammonium chloride and Ammonium Hydroxide etc.

3.1 Concept

The ThinkTop D30 is designed to ensure valve control in a basic market, using Alfa Laval air operated actuators such as butterfly, single and double-seat valves. it is compatible with all major PLC systems (Programmable Logic Controller) with a digital PNP interface.

It is for use in food, dairy and brewery installations. ThinkTop D30 is a complementary, alternative solution to the existing range of control units.

ThinkTop D30 is the first of its kind on the market that focuses on new methods to simplify all aspects of using a basic control unit to minimise and optimise installations instead of using external solenoid valves

3.2 Working principle

The ThinkTop D30 is an easy-to-use plug `n play control unit with integrated intelligence which monitors the status of the operating air pressure, identifying air leakage or failing air pressure. The integrated solenoid valve allows control of the processing valve.

Mounted on top of the valve, the unit receives signals from a PLC system to control the solenoid valve and it returns the supervised air pressure signals for valve energised or de-energised feedback to the PLC system. The ThinkTop D30 has a 360 degree visual valve status indicator, which can be seen at a distance and at any angle.

3.3 Recycling information

Unpacking


- Packing material consists of wood, plastics, cardboard boxes and in some cases metal straps
- Wood and cardboard boxes can be reused, recycled or used for energy recovery
- Plastics should be recycled or burnt at a licensed waste incineration plant
- Metal straps should be sent for material recycling

Scrapping

- At the end of use, the equipment should be recycled according to relevant, local regulations. In addition to the actual equipment, any hazardous residues from the process liquid must be considered and disposed of in a proper manner. When in doubt, or in the absence of local regulations, please contact your local Alfa Laval representative.

4 Installation

4.1 Product dimensions

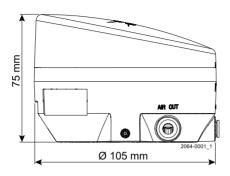

4.2 Compatible actuators

SBV	Yes
Koltek	Yes
LKLA-T	Yes
LKLA	No
ARC	Yes
SRC	Yes
SRC long stroke	No
i-SSV	Yes
Unique SSV	Yes
Unique SSV long stroke	No
Unique SSV DN125 - DN150	No
SSV DN80 (76.1 mm) High pressure	No
SSV DN100 (101.6 mm) High pressure	No
SMP valves	Yes
Unique Mixproof	No
Air/air actuators	NO

4.3 Installation instructions

Step 1


Place the ThinkTop D30 on top of the actuator.

Ensure that the unit is correctly mounted by pressing down on top of the ThinkTop D30.

Cross-tighten the two allen screws carefully (1.50 Nm).



When mounting the ThinkTop D30 on a horizontal mounted actuator make sure that the exhaust port is not pointing upwards. The exhaust port is marked with "EX.".

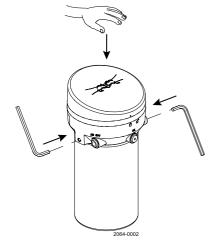

Step 2

Connect the air supply to the air-in port (A). Connect the air-out port (B) to the actuator.


NOTE!

Option in case of a $\frac{1}{4}$ " air supply hose system. Connect the air supply hose via an $\frac{8}{4}$ " angle adaptor.

The angle adaptor is sold separately:


Article number: 9611-99-5679, \emptyset 6 / 1/4" angle adaptor. The angle adaptor is also available as \emptyset 6 / \emptyset 6:

Article number: 9611-99-5678, ø6 / ø6 angle adaptor.

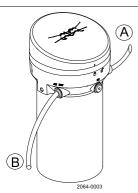

Step 3

Remove the top cover by turning the top cover anti-clockwise. When the mark on the top cover (C) is aligned with the open padlock symbol (D), the top cover can be lifted off.

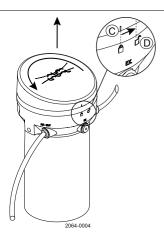

Step 4

Install the cable in the cable gland.

NOTE

Cable connection

Cable gland: PG7 (cable dia. ø4.0 - ø6.8 mm)

Recommended conductor

cross section: 0.5 mm² (AWG 20).



If the cable gland comes loose from the control head during installation, it must be secured with a tightening torque of 1.50 Nm.



To fulfil the UL requirements in UL61010, the unit must be supplied by an isolating source that complies with the requirements for class 2 power units (UL1310) or class 2 and 3 transformers (UL1585).


Electrical connection

Digital Interface Sensor board Terminal strip

Connection of power supply { GND 24 VDC	
PLC output signal Trigger solenoid	d
PLC output signal { Ingger solenow PLC input signals { Alarm De-energised Energised	

Step 5

Put the top cover back on by pushing it down when the mark on the top cover (E) and the open padlock (F) are aligned. Then turn it clockwise towards the closed padlock (G) to secure the top cover.

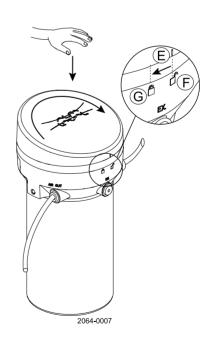

4.4 Operating LED feedback

Actuator status	LED feedback
De-energised	Green
Energised	Yellow
Alarm (Air pressure)	Red flashing

5 Troubleshooting


Error scenarios

Condition	Possible cause	Solution
Red LED flashing.	Insufficient air pressure in the actuator.	Check the air supply and the air connections on the unit.

Technical data

General		
Operating pressure	400 - 700 kPa (4-7 bar)	
Supply air quality	Class 3	ISO 8573-1
Push-in fittings	ø6 mm tube	
Ambient temperature (operating)	-10°C to +50°C	
Storage temperature (non operating)	-15°C to +60°C	
Protection class	IP66 and IP67	IEC 60529
Approvals		
UL listed	Rated: 24V, 39mA	UL 61010
	Class 2 input Environment type 1	000 0 11 04040
CSA listed	Liviloriment type 1	C22.2 No. 61010
Communication		
Interface	Digital - PNP	EN61131-2
Supply voltage	24 VDC ± 10%	
Current consumption - solenoid active	39 mA	
Current consumption - solenoid inactive	28 mA	
Short circuit and brownout protection	Yes	EN61131-2
Solenoid valve		
Type of solenoid	3/2 NC	
Number of solenoids	1	
Manual override	Yes (Non-locking)	
Actuation flow (at 6 bar)	160 l/min	
Exhaust flow (at 6 bar)	140 l/min	
Physical data		
Materials		
Body	Black nylon PA 6 (reinforced)	
Light guide	Transparent polyamide	
Seals	Nitrile (NBR)	
Cable connection		
Cable gland	PG7 (cable range ø4.0 - ø6.8 mm)	
Recommended conductor cross section	0.5 mm ² (AWG20)	
Terminal block connection data		
Conductor cross section min.	,	
Conductor cross section max.	1.5 mm ² (AWG16)	

7.1 Parts list

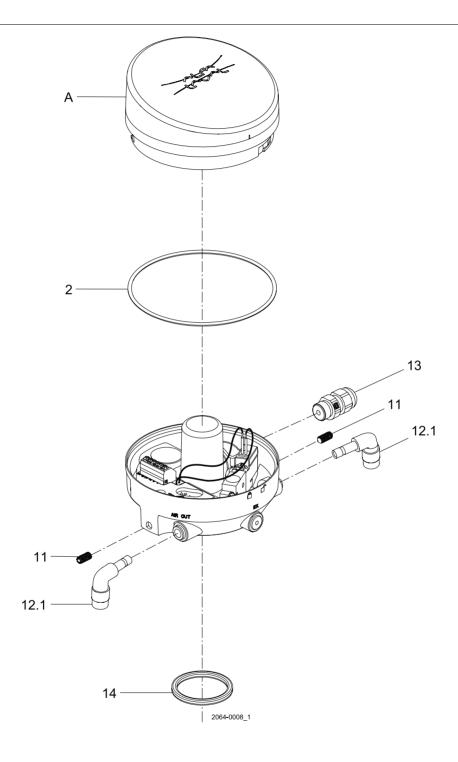

Parts list

Pos.	Qty	Denomination
A		Top incl. prism and O-rings
2	1	O-ring
11	2	Allen screw
12.1	1	Air fitting
13	1	Cable gland PG7
14	1	X-ring

This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.

How to contact Alfa Laval Contact details for all countries are continually updated on our website.

© Alfa Laval Corporate AB

Please visit www.alfalaval.com to access the information directly.